





LED FLOOR

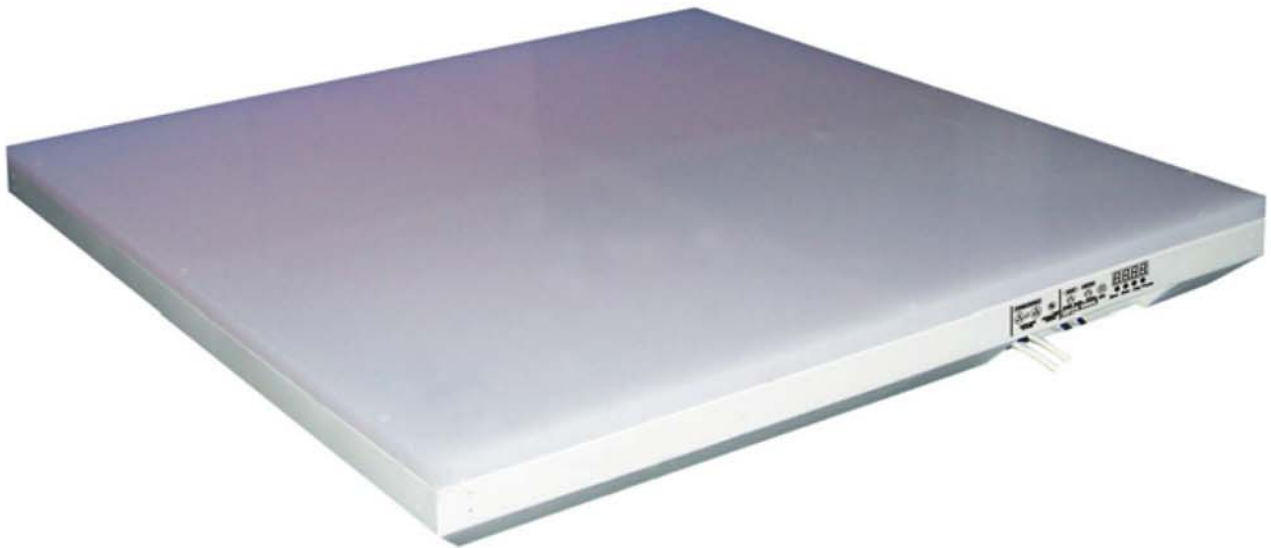

1. House size

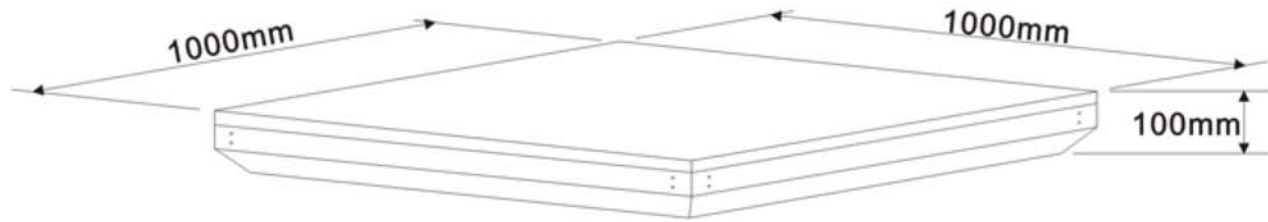


2. Install

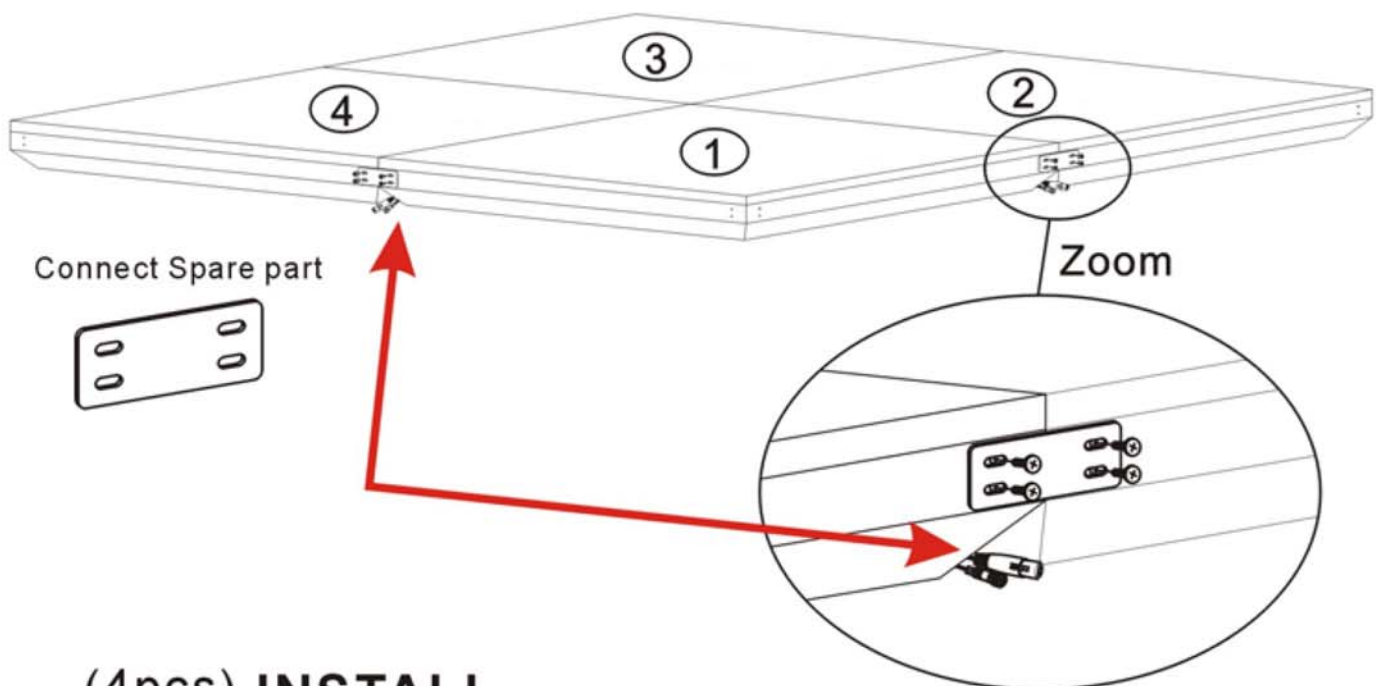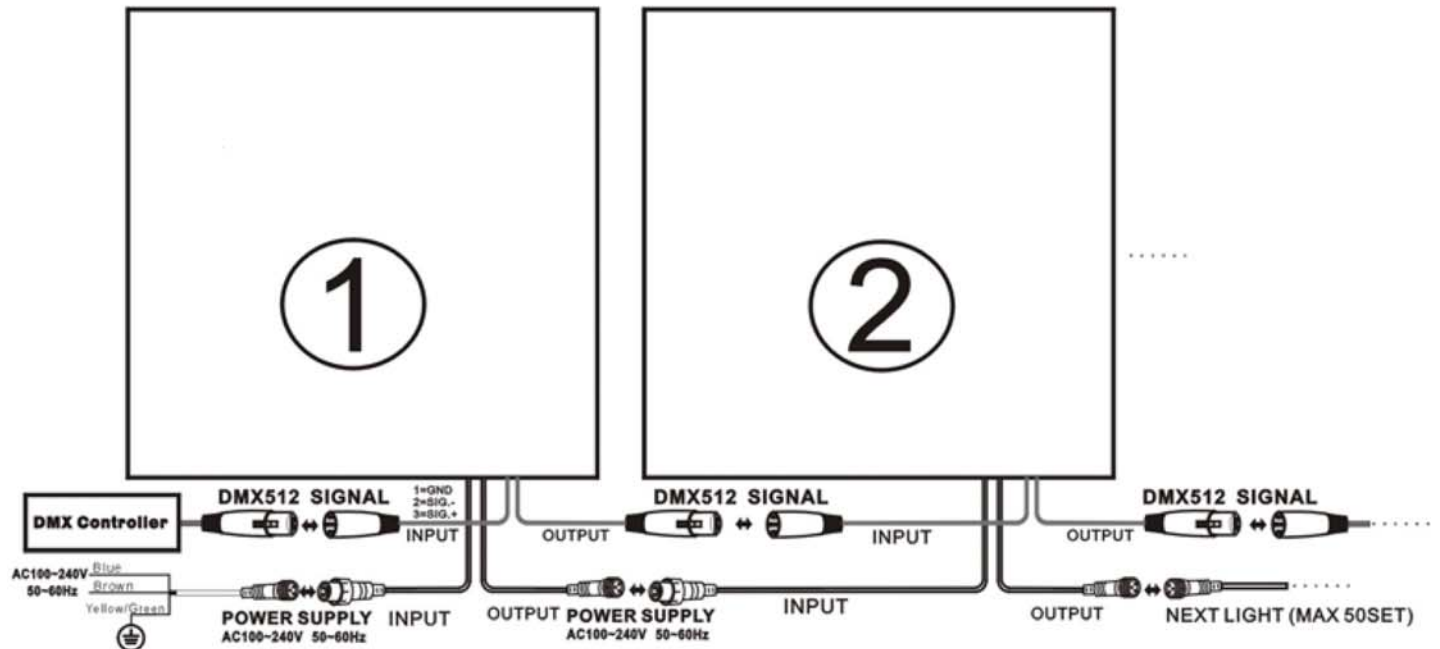


(4pcs) INSTALL

3. Control panel

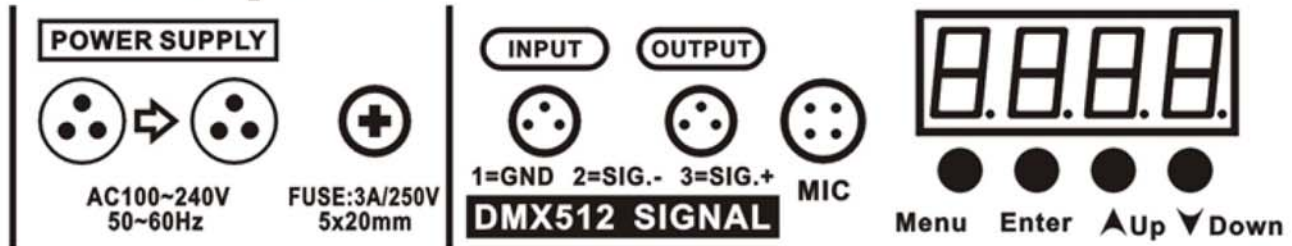


- To adjust the personal setting of the LED FLOOR use keys located on the control panel. Functions see menu on the following page.
- To enter the menu press "Menu" key one time. Use keys "▲ Up" and "▼ Down" to move within the menu. Use key "Enter" to select the function and to recall the next menu section. To escape press key "Menu".

■ Menu navigation

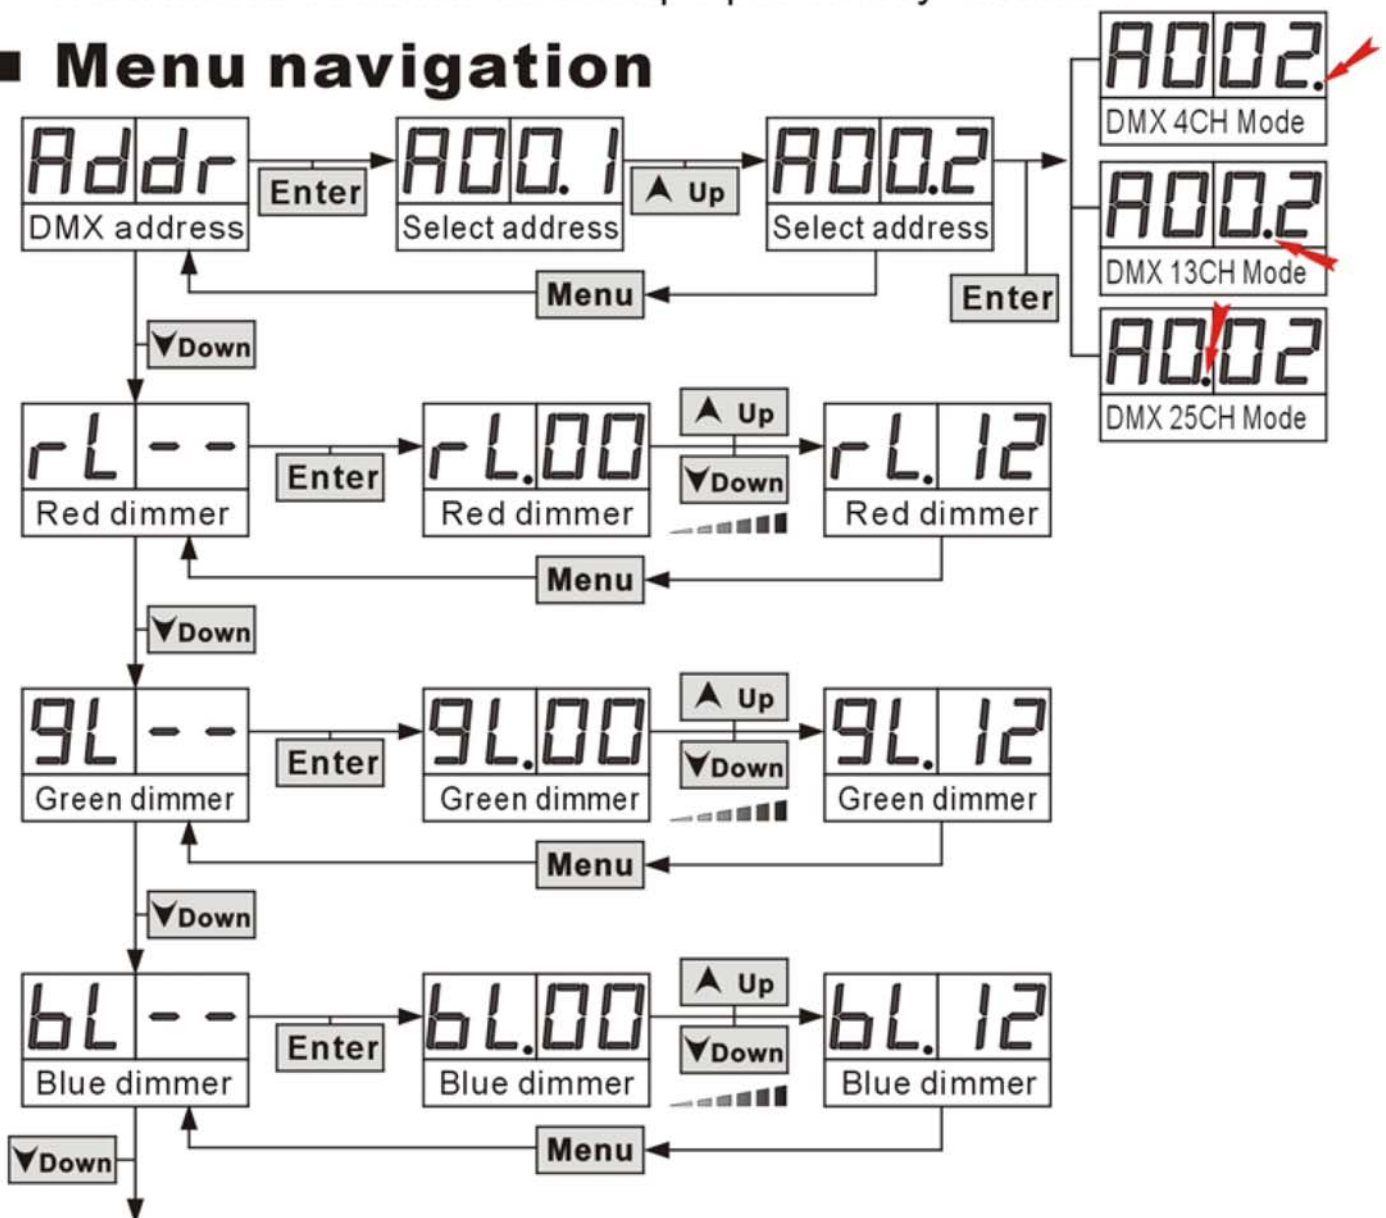

LED FLOOR MICROH

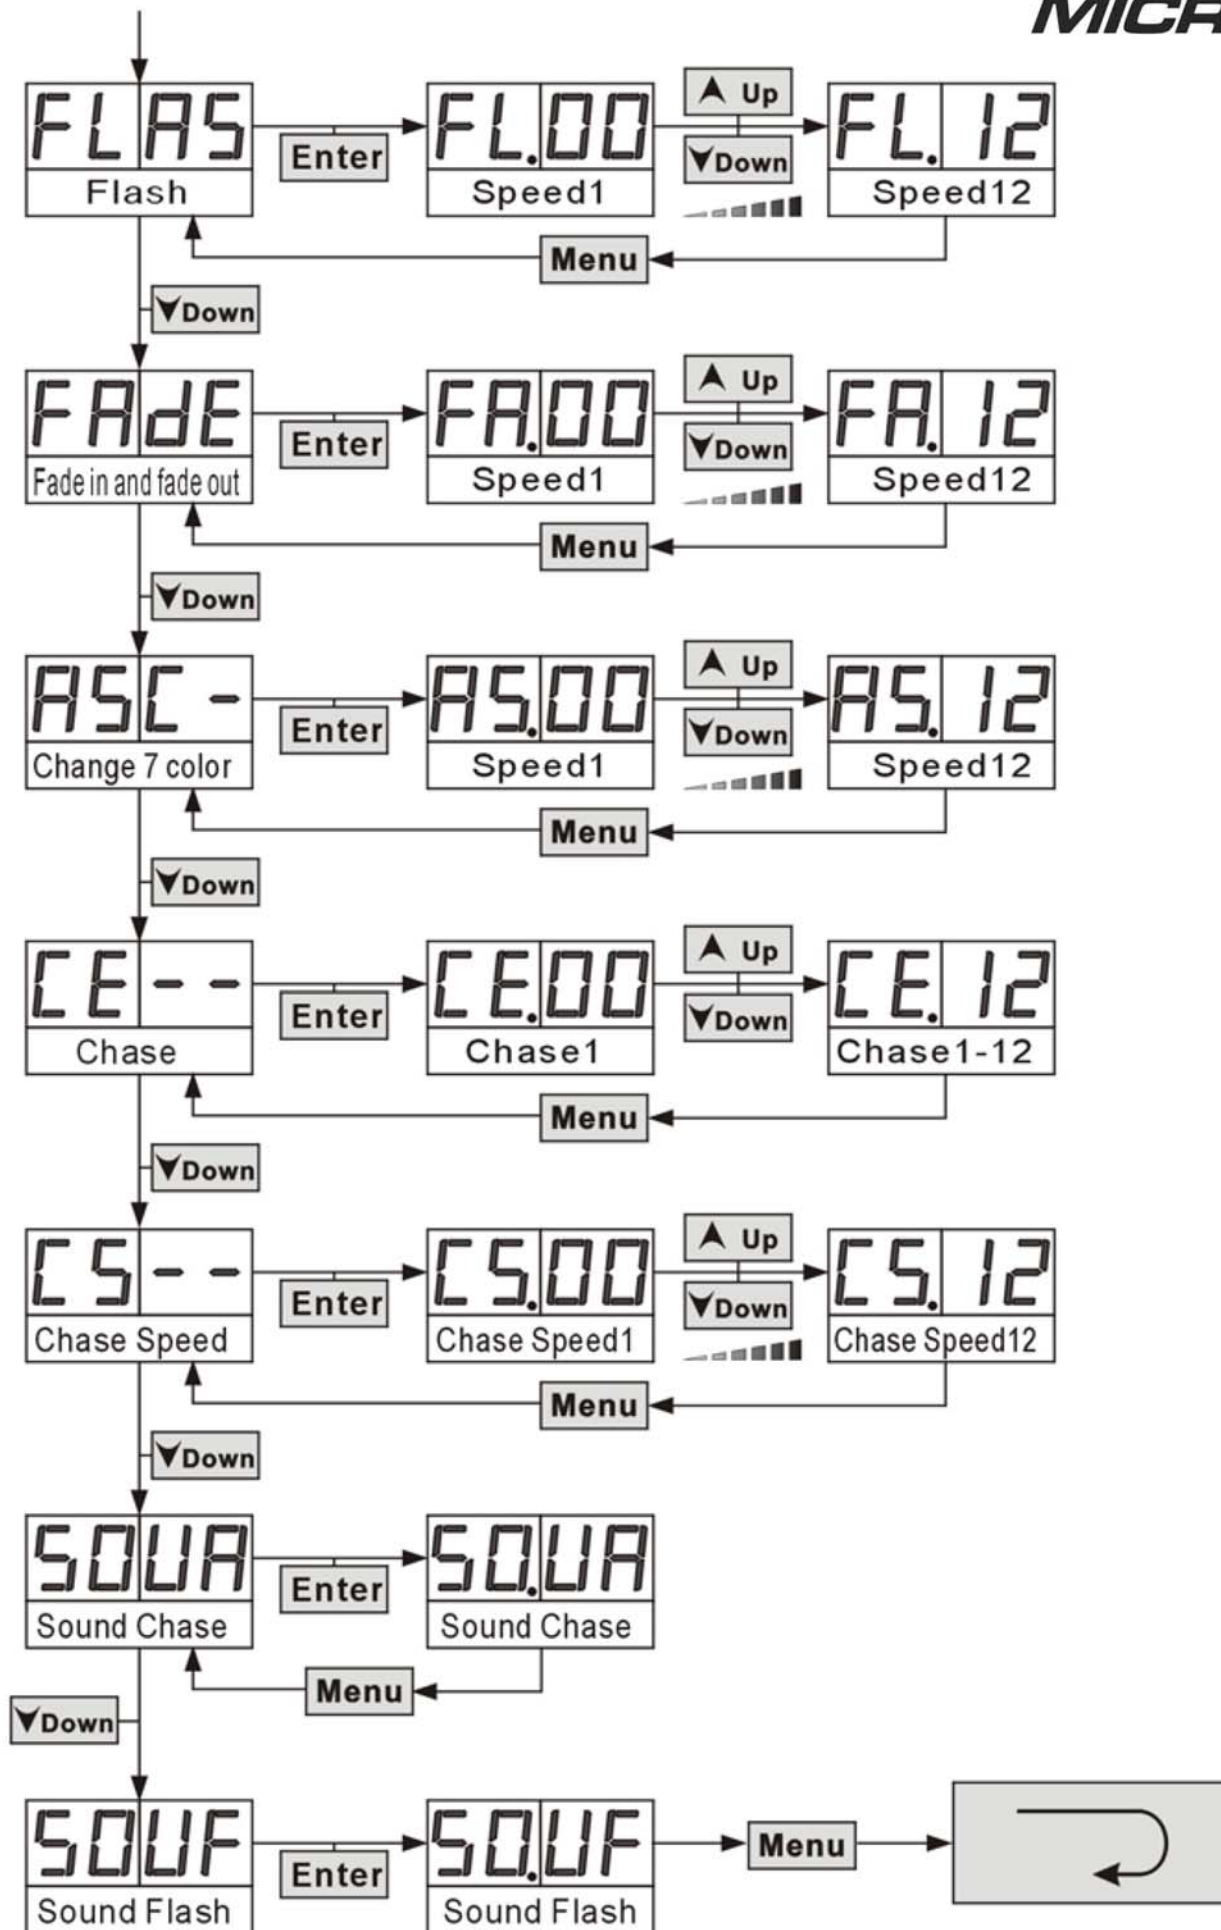

4. Function:

■ Manual mode

1		Red dimmer
2		Green dimmer
3		Blue dimmer

■ Auto mode

1		Flash
2		Automatic fade in and fade out
3		Auto change 7 color
4		Chase lights
5		Chase lights speed

■ Sound control mode

1		Sound Chase lights
2		Sound 7 color flash

■ Synchronization mode(master and slave)

1	Master light	Choose same as (manual ,auto, sound control) mode way
2	All slave lights	

■ DMX 512 mode

DMX Addressing:

Enter DMX address by means of the keys "▲ Up " and "▼Down".
Confirm a store by pressing key "Enter".

5. DMX channel allocation:

Channel 1: 0-3 light OFF

4-9 light ON (Ch2-Ch25 dimmer valid)

10-39 strobe (Ch2-Ch25 dimmer valid)

40-69 fade in and fade out (Ch2-Ch25 dimmer no valid)

70-99 auto 7 color change (Ch2-Ch25 dimmer no valid)

100-110 chase1 , 111-121 chase2 , 122-132 chase3,

133-143 chase4 , 144-154 chase5 , 155-165 chase6,

166-176 chase7 , 177-187 chase8 , 188-198 chase9,

199-209 chase10 , 210-220 chase11 , 221-231 chase12,

232-244 chase1-chase12 (Ch2-Ch25 dimmer no valid)

245-250 sound chase, 251-255 sound strobe (Ch2-Ch25 dimmer no valid)

Channel 2:

DMX 4CH Mode :0-255 ①—⑧ red dimmer

DMX 13CH Mode :0-255 ①—② red dimmer

DMX 25CH Mode :0-255 ① red dimmer

Channel 3:

DMX 4CH Mode :0-255 ①—⑧ green dimmer

DMX 13CH Mode :0-255 ①—② green dimmer

DMX 25CH Mode :0-255 ① green dimmer

Channel 4:

DMX 4CH Mode :0-255 ①—⑧ blue dimmer

DMX 13CH Mode :0-255 ①—② blue dimmer

DMX 25CH Mode :0-255 ① blue dimmer

Channel 5:

DMX 13CH Mode :0-255 ③—④ red dimmer

DMX 25CH Mode :0-255 ② red dimmer

Channel 6:

DMX 13CH Mode :0-255 ③—④ green dimmer

DMX 25CH Mode :0-255 ② green dimmer

Channel 7:

DMX 13CH Mode :0-255 ③—④ blue dimmer

DMX 25CH Mode :0-255 ② blue dimmer

Channel 8:

DMX 13CH Mode :0-255 ⑤—⑥ red dimmer

DMX 25CH Mode :0-255 ③ red dimmer

Channel 9:

DMX 13CH Mode :0-255 ⑤—⑥ green dimmer

DMX 25CH Mode :0-255 ③ green dimmer

Channel 10:


DMX 13CH Mode :0-255 ⑤—⑥ blue dimmer

DMX 25CH Mode :0-255 ③ blue dimmer

⋮ ⋮



Channel 25:

DMX 25CH Mode :0-255 ⑧ blue dimmer

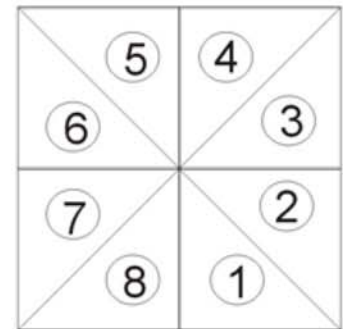

LED FLOOR

6. Wiring diagram

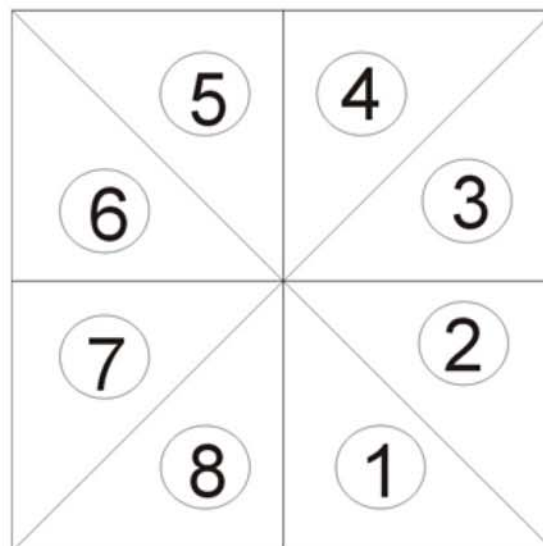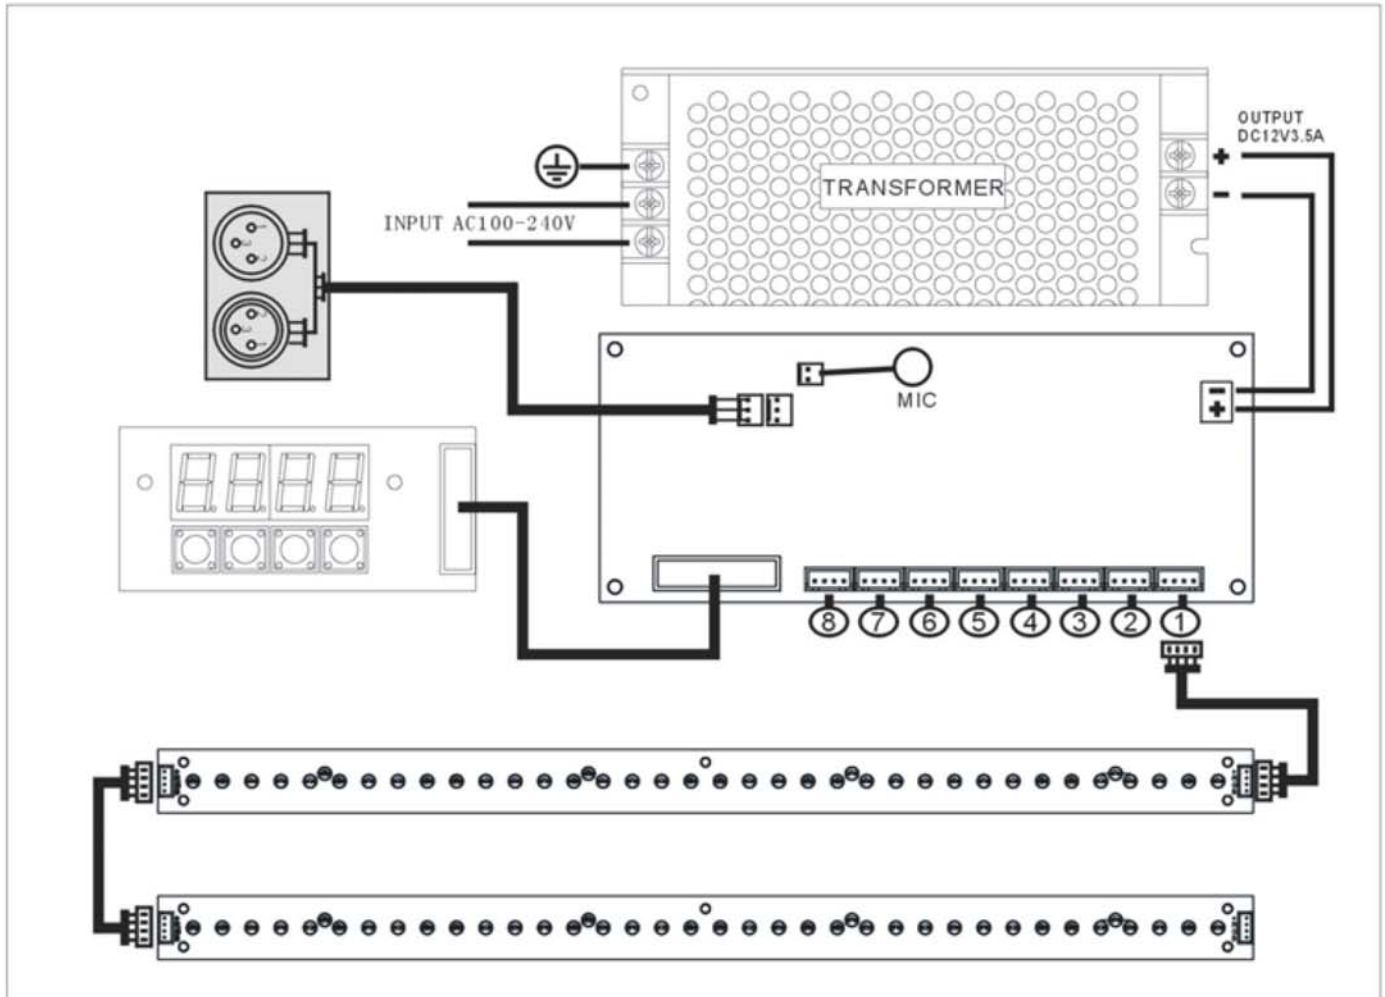

LED FLOOR

7. Spectifician

1.IP54

2.Support weight:800kg

3.LEDS: 640pcs @5mm rgb

4.AC100-240V/50-60Hz

5.Rated power: 47.8w

6.Control model:

Automatic model;

Sound-activated model;

Master & slaver model;

DMX512 model: 3DMX models are optional

changed by digital coder display

7.Shipping weight:56kgs

8.Shipping Size: 105 x 105 x 18cm

9.Master packed: 1pc